



## INSTALLATION, SERVICE AND MAINTENANCE INSTRUCTIONS

### HYGINOX SE



01.011.32.0001

#### **INOXPA, S.A.**

c/Telers, 54 Aptdo. 174

E-17820 Banyoles

Girona (Spain)

Tel. : (34) 972 - 57 52 00

Fax. : (34) 972 - 57 55 02

email: [inoxpa@inoxpa.com](mailto:inoxpa@inoxpa.com)

[www.inoxpa.com](http://www.inoxpa.com)





## EC Declaration of Conformity

The manufacturer: **INOXPA, S.A.**  
c/ Telers, 57  
17820 Banyoles (Girona), Spain

herewith declares that the machine:

### **HYGINOX SE centrifugal pump**

with the serial number: \_\_\_\_\_

conforms to the relevant provisions of the following directives:

Machinery Directive 2006/42/EC (RD 1644/2008)  
Low voltage Directive 2006/95/EC  
Electromagnetic Compatibility Directive 2004/108/EC

Applicable harmonised Standards:

UNE-EN ISO 12100:2012  
UNE-EN 809:1999+A1:2010

Identification of the person empowered to draw up the Declaration on behalf of the manufacturer, and qualified to compile the technical file established by the Community:

Banyoles, 20 February 2014

A handwritten signature in black ink, appearing to read 'David Reyer Brunet', is written over a light grey grid background.

David Reyer Brunet  
Technical Office Manager

# 1. Safety

## 1.1. INSTRUCTION MANUAL

This manual contains information regarding the reception, installation, operation, assembly, disassembly and maintenance of the HYGINOX SE pump.

The information published in the instruction manual is based on updated data.

INOXPA reserves the right to modify this instruction manual without prior notice.

## 1.2. INSTRUCTIONS FOR START-UP

This instruction manual contains essential and useful information for the correct handling and maintenance of your pump.

Carefully read the instructions prior to starting the pump, familiarise yourself with the installation, operation and correct use of the pump and strictly follow the instructions. These instructions should be kept in a safe location near the installation area.

## 1.3. SAFETY

### 1.3.1. Warning symbols



Safety hazard for people in general



Danger of injury caused by rotating equipment parts



Electric hazard



Danger! Caustic or corrosive agents.



Danger! Suspended loads



Danger for the correct operation of the equipment



Mandatory to ensure safety at the workplace



Mandatory use of safety goggles

## 1.4. GENERAL SAFETY INSTRUCTIONS



Read the instruction manual carefully before installing and starting the pump. Contact INOXPA in case of doubt.

### 1.4.1. During the installation



The *Technical Specifications* of Chapter 8 should always be observed.

Never start the pump before connecting it to the lines.

Do not operate the pump if the pump cover is not fitted.

Check for proper specifications of the motor, especially if its working conditions create an explosion hazard.



During the installation, all the electric work should be carried out by authorised personnel.

### 1.4.2. During operation



The *Technical Specifications* of Chapter 8 should always be observed. Under no circumstances can the specified limit values be exceeded.

NEVER touch the pump or the pipework during operation if the pump is being used for transferring hot liquids or during cleaning.



The pump contains moving parts. Never place your fingers inside the pump during operation.



NEVER operate with the suction and discharge valves closed.

NEVER spray water directly on the electrical motor. The standard motor protection is IP-55: protection against dust and water spray.

### 1.4.3. During maintenance



The *Technical Specifications* of Chapter 8 shall always be observed.

NEVER disassemble the pump until the pipes have been emptied. Remember that liquid will remain inside the pump's casing (if does not have a purge). Bear in mind that the pumped liquid may be hazardous or extremely hot. Consult the regulations in effect in each country for these cases.

Do not leave loose parts on the floor.



ALWAYS disconnect the electrical power to the pump prior to carrying out any maintenance. Remove the fuses and disconnect the cables from the motor's terminals.

All electrical work must be carried out by authorised personnel.

### 1.4.4. Compliance with the instructions

Not following the instructions may impose a risk for the operators, the environment and the machine, and may result in the loss of the right to claim damages.

This non-compliance may result in the following risks:

- Failure of important machine/plant functions.
- Failure of specific maintenance and repair procedures.
- Possible electrical, mechanical and chemical hazards.
- Risk to the environment due to the type of substances released.

### 1.4.5. Warranty

Any warranty will be void immediately and lawfully; additionally, INOXPA will be compensated for any civil liability claims submitted by third parties, in the following cases:

- The service and maintenance work have not been carried out in accordance with the service instructions, the repairs have not been carried out by our personnel or have been carried out without our written authorisation;
- Modifications have been carried out on our material or equipment without written authorisation;
- The parts or lubricants used are not INOXPA genuine parts;
- The material or equipment has been improperly used, has been used negligently, or has not been used according to the instructions and their intended;
- The pump parts are damaged because they have been subjected to high pressure due to not having used a safety valve.

The General Conditions of Delivery already in your possession are also applicable.



The machine may not undergo any modification without prior approval from the manufacturer. For your safety, only use original spare parts and accessories.

The usage of other parts will relieve the manufacturer of any liability.

Changing the service conditions can only be carried out with prior written authorisation from INOXPA

Please do not hesitate to contact us in case of doubts or if further explanations are required regarding specific data (adjustments, assembly, disassembly, etc.).

## 2. Table of contents

<b>1. Safety</b>	
1.1. Instruction manual.....	3
1.2. Instructions for start-up.....	3
1.3. Safety.....	3
1.4. General safety instructions.....	3
<b>2. Table of contents</b>	
<b>3. General Information</b>	
3.1. Description.....	7
3.2. Application.....	7
<b>4. Installation</b>	
4.1. Reception of the pump.....	8
4.2. Transport and storage.....	9
4.3. Location.....	9
4.4. Pipes.....	9
4.5. Electrical installation.....	10
<b>5. Starting the pump</b>	
5.1. Start-up.....	11
<b>6. Operating problems</b>	
<b>7. Maintenance</b>	
7.1. General considerations.....	13
7.2. Storage.....	13
7.3. Cleaning.....	13
7.4. Assembly / disassembly of the pump.....	15
<b>8. Technical Specifications</b>	
8.1. Technical Specifications.....	17
8.2. Tightening torques.....	17
8.3. Cross section HYGINOX SE.....	18
8.4. HYGINOX SE parts list.....	19

## 3. General Information

### 3.1. DESCRIPTION

HYGINOX SE is a range of close-coupled centrifugal pumps with hygienic design, suitable for use in the dairy, beverage, and food industry in general.

This single-stage horizontal pump has a circular casing with axial suction and tangential discharge. The main pump components are: pump casing, impeller, cover, lantern and a shaft which is rigidly coupled to the motor shaft.

The standard IEC motor of type IM B34 is protected by a stainless steel shroud and provided with height adjustable stainless steel legs.

### 3.2. APPLICATION

As a general rule, HYGINOX SE pumps in their standard version are used in the food industry mainly to transfer liquids.

For each type of the pump, the hydraulic performance is given by the choice of impeller diameters and speeds. The characteristic curves also show the power and NPSH requirements. The intended use of the pump is defined by its characteristic curve and operating limits provided in the Technical Specifications section.



Misuse of the pump or its use beyond the operating limits may be dangerous or cause permanent damage to the equipment.

# 4. Installation

## 4.1. RECEPTION OF THE PUMP



INOXPA will not be liable for any deterioration of the material due to transport or unpacking. Visually check that the packaging has not been damaged.

The following documentation is included with the pump:

- Shipping documents.
- Instructions and Servicing manual for the pump.
- Instructions and Servicing manual for the motor (\*).
- (\*) If the pump has been supplied with a motor from INOXPA.

Unpack the pump and check the following:



- The suction and discharge connections on the pump, removing any remaining packaging material.
- Check that the pump and motor have not suffered any damage.
- If not in good material condition and/or if not all the parts are included, the shipping carrier should submit a report as soon as possible.

### 4.1.1. Identification of the pump

Each pump has a nameplate with the basic data required to identify the model.


Pump plate

## 4.2. TRANSPORT AND STORAGE



The HYGINOX SE pumps are often too heavy to be stored manually.

Lift the pump as indicated below:

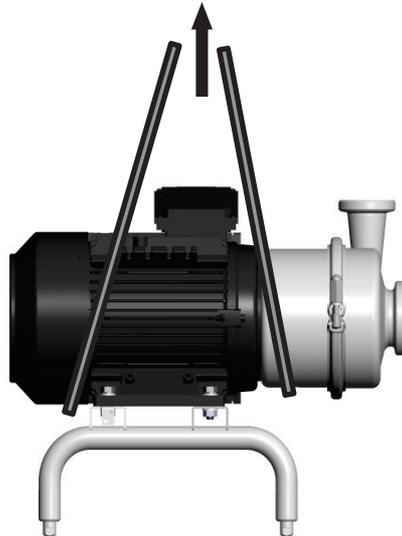

### ATTENTION!

Always remove the motor shroud before hoisting.

01.011.32.0003

## 4.3. LOCATION

Place the pump in a position that allows enough space around it to provide access to the pump as well as to the motor. (Refer to Section 8. *Technical Specifications* for dimensions and weights.)

Place the pump on a flat and level surface.



Install the pump so that it can be properly ventilated.

If the pump is installed outdoors, it must be sheltered under a roof. Its location must allow for easy access during any inspection or maintenance tasks.

## 4.4. PIPES

- As a general rule, install the suction and discharge lines in straight sections, with the minimum possible number of elbows and fittings in order to reduce any pressure losses that may be caused by friction.
- Make sure that the pump's ports are properly aligned with the pipework and have a diameter similar to that of the pump connections.
- Place the pump as close as possible to the suction tank and whenever possible below the liquid level, or even below the tank level in order to achieve the largest possible static head for suction.
- Install support brackets for the lines as close as possible to the pump's suction and discharge ports.

### 4.4.1. Shut-off valves

The pump may be isolated for maintenance. To accomplish this, shut-off valves must be installed and connected to the pump's suction and discharge connections.

These valves must ALWAYS be open during operation of the pump.

#### 4.5. ELECTRICAL INSTALLATION




Only qualified personnel can connect the electric motors.  
Take the necessary measures to prevent damage to cables and connections.



Electrical equipment, terminals and components of the control systems may still carry current when they are disconnected. Contacting them may impose a hazard to operators or cause irreparable material damage.

Prior to handling the pump, make sure that the electrical panel is disconnected.

- Connect the motor in accordance with the instructions supplied by the motor manufacturer.
- Check the direction of rotation.

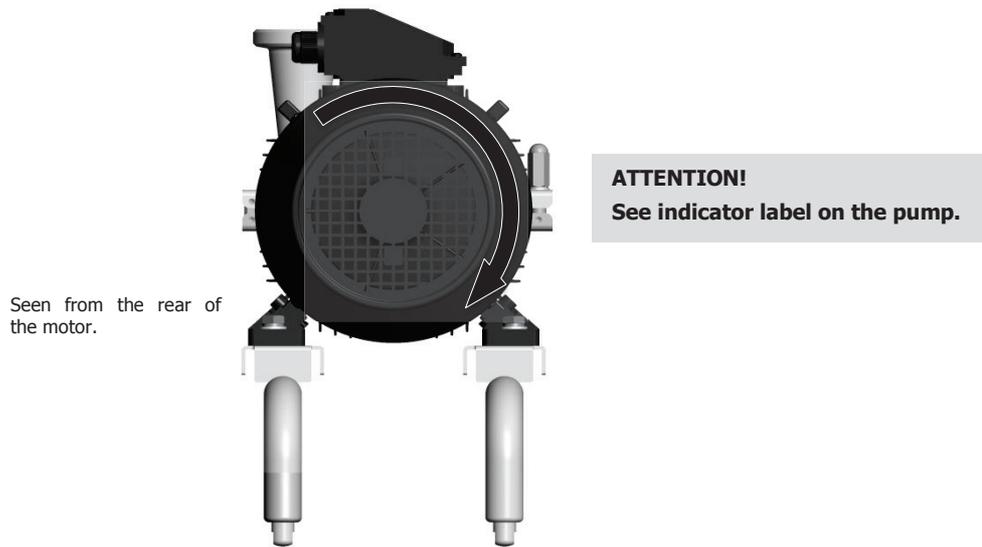

Start and stop the pump motor momentarily. Make sure, looking at the pump from behind, that the motor fan rotates in a clockwise direction.



**ALWAYS** check the direction of rotation of the motor with liquid inside the pump.

## 5. Starting the pump



Prior to starting the pump, carefully read the instructions in Section 4. *Installation*.

### 5.1. START-UP



Carefully read Section 8. *Technical Specifications*. INOXPA will not be liable for improper use of the equipment.



NEVER touch the pump or the lines if hot liquids are being pumped.

#### 5.1.1. Checks before starting the pump

- Completely open the shut-off valves on the suction and discharge lines.
- If liquid does not flow towards the pump, fill it with the liquid to be pumped.



The pump must never turn dry.

- Check that the direction of rotation of the motor is correct.

#### 5.1.2. Checks when starting the pump


- Check that the pump is not making any strange noises.
- Check if the absolute inlet pressure is sufficient to prevent cavitation in the pump. Check the curve to obtain the minimum required pressure above the vapour pressure (NPSHr).
- Control the discharge pressure.
- Check for leaks in the sealing areas.



A shut-off valve shall not be used to regulate the flow in the suction line. All shut-off valves must be fully open during operation.



Control the motor consumption to prevent an electrical overload.

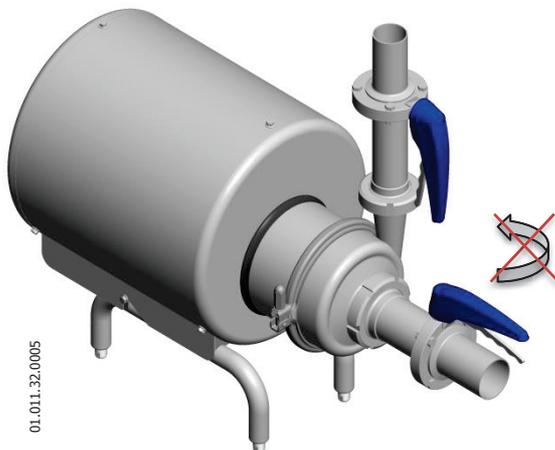

Reduce the flow rate and the electrical power consumed by the motor:

- by regulating the pump's discharge flow.
- by decreasing the motor speed.



Use special protection when the sound pressure in the operation area exceeds 80 dB(A).



# 7. Maintenance

## 7.1. GENERAL CONSIDERATIONS

This pump, just like any other machine, requires maintenance. The instructions contained in this manual cover the identification and replacement of spare parts. The instructions are aimed at maintenance personnel and those responsible for the supply of spare parts.



Carefully read Chapter 8. *Technical Specifications*.



All replaced material should be duly disposed of/recycled according to the directives in force in each area.

ALWAYS disconnect the pump before beginning any maintenance work.

### 7.1.1. Check the mechanical seal

Periodically check that there are no leaks around the shaft. If leakage is detected through the mechanical seal, replace it following the instructions in the section Assembly and Disassembly.

## 7.2. STORAGE

Before storing the pump it should be completely drained. Prevent as far as possible exposing the parts to excessively humid environments.

## 7.3. CLEANING



The use of aggressive cleaning products such as caustic soda and nitric acid may burn the skin.

Use rubber gloves during the cleaning process.



Always use protective goggles.

### 7.3.1. CIP (Clean-in-Place) cleaning

If the pump is installed in a system with a CIP process, its removal will not be required. If an automatic cleaning process is not available, disassemble the pump as indicated in the section *Assembly and Disassembly*.

#### Cleaning solutions for CIP processes.

Only use clear water (chlorine-free) to mix with the cleaning agents:

**a) Alkaline solution:** 1% by weight of caustic soda (NaOH) at 70°C (150°F)

1 kg NaOH + 100 litres of water = cleaning solution

or

2.2 litres of 33% NaOH + 100 litres of water = cleaning solution

**b) Acid solution:** 0.5% by weight of nitric acid (HNO<sub>3</sub>) at 70°C (150°F)

0.7 litres of 53% HNO<sub>3</sub> + 100 litres of water = cleaning solution



Check the concentration of the cleaning solutions; incorrect concentrations may lead to deterioration of the pump seals.

To remove any traces of cleaning products, ALWAYS perform a final rinse with clean water at the end of the cleaning process.

### 7.3.2. SIP (Sterilization-in-Place) cleaning

Sterilization with steam is applied to all equipment including the pump.



Do NOT use the equipment during the steam sterilization process.

The parts/materials will not be damaged if the indications specified in this manual are observed.

Make sure that no cold liquid enters the system until the temperature of the pump is lower than 60°C (140°F).

The pump generates an important pressure loss through the sterilization process. We recommend the use of a branch circuit with a discharge valve to ensure that steam / superheated water sterilizes the integrity of the circuit.

Maximum conditions during the SIP process with steam or overheated water


- a) **Max. temperature:** 140°C / 284°F
- b) **Max. time:** 30 min.
- c) **Cooling:** Sterile air or inert gas
- d) **Materials:** EPDM  
FPM

## 7.4. ASSEMBLY / DISASSEMBLY OF THE PUMP


### 7.4.1. Pump and single mechanical seal

#### ⇒ Disassembly


1. Remove the clamping ring (15) and disassemble the pump casing (01).
2. Check the condition of the O-ring (80) on the pump casing and replace if damaged.

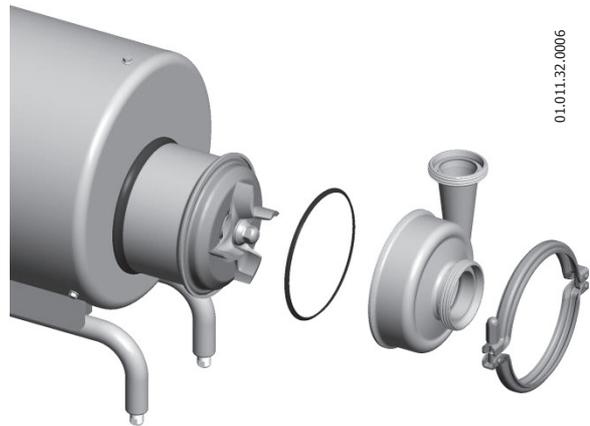

3. Place an open-end wrench on the flat sides of the shaft (05) to prevent it from rotating.
4. Remove the impeller nut (45) and the O-ring (80A).
5. Pull out the impeller (02). If necessary, hit it with a dead blow using a plastic mallet in order to disengage the cone.
6. Remove the rotating part of the seal (08) from the rear side of the impeller (02).
7. Remove the pump cover (03) from the lantern (04).
8. Manually remove the stationary part of the seal (08) which is located in the pump cover (03).

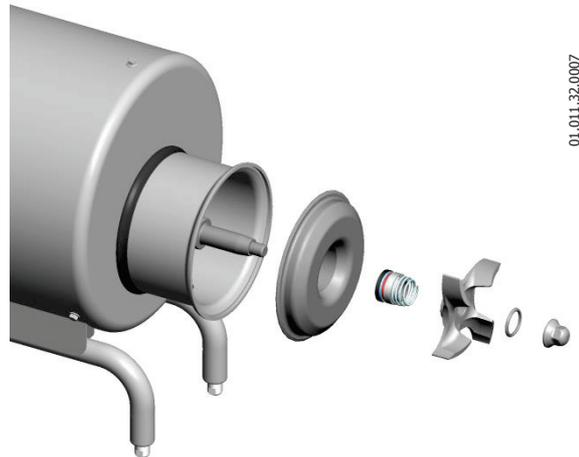


9. Remove the splash ring (82)
10. Loosen the studs (55) from the shaft (05) and take it off from the motor (93).

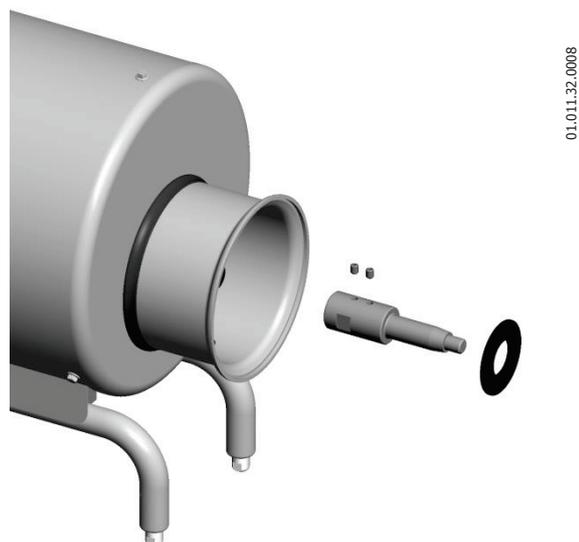


## ← Assembly

1. Place the shaft (05) on the motor (93).
2. Fix the shaft (05) with the studs (55) to the motor (93) leaving it to gauge the impeller (02) with the pump cover (03).

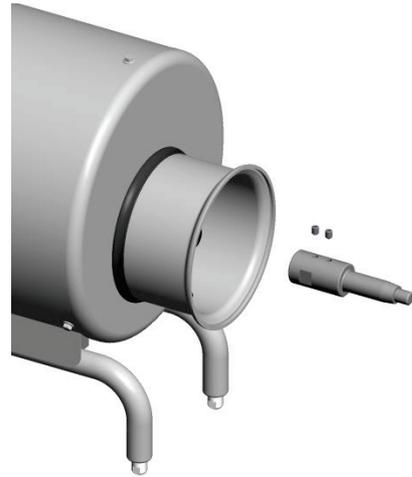


01.011.32.0008

3. Enter the pump cover (03) on the centering lantern (04).
4. Put the impeller (02) on the shaft, tighten the cap nut (45) and gauge according the picture.
5. Now, tighten the studs (55) strongly that fix the shaft (05) to the motor (93).
6. Untighten the cap nut (45) and quit the impeller (02) and the pump cover (03).

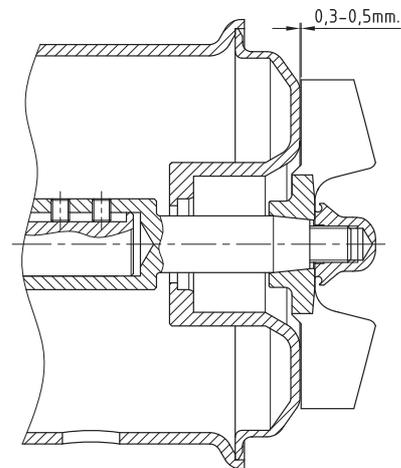

01.011.32.0010


7. Place the splash ring (82) in the shaft (05).
8. Fit the stationary part of the seal (08) on the pump cover (03) with the fingers.
9. Put the pump cover (03) on the lantern (04).
10. Fit the rotating part of the mechanical seal (08) in the shaft (05) and place the impeller (02).
11. Place the O-ring (80D) in the impeller nut (45) and insert the impeller (02) on the pump shaft (05) and secure with the nut (45).

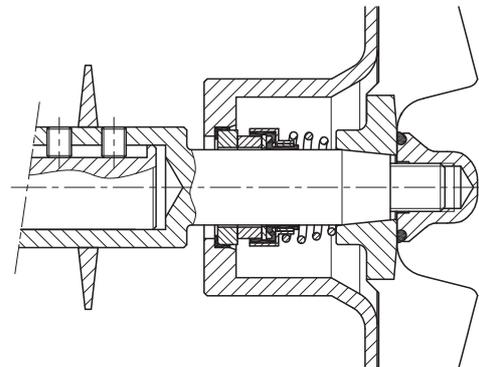

01.011.32.0011

**ATTENTION!** When installing the new seal, use soapy water when fitting the different parts and gaskets to allow them to slide better; apply to the stationary as well as the rotating parts.

1. Mount the o-ring (80A) on the pump cover (03) taking care that it is not twisted.
2. Put the pump casing (01) and secure it on the lantern (04) by the casing clamp (15) and tighten the clamp nut tightly.

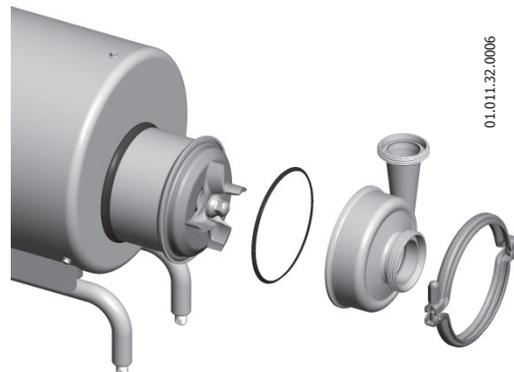

01.011.32.0006

# 8. Technical Specifications

## 8.1. TECHNICAL SPECIFICATIONS

Maximum operating pressure	1000 kPa (10 bar)
Temperature range	-10 to 120 °C (EPDM)
Maximum speed	3000 rpm (50 Hz) 3600 rpm (60 Hz)

### Materials

Parts in contact with the product	AISI 316L (1.4404)
Other steel parts	AISI 304L (1.4306)
Gaskets in contact with the product	EPDM (standard) FPM (other materials available upon request)
Other gaskets	EPDM
Exterior surface finish	Bright polished
Interior surface finish	Polished Ra<0,8 µm

### Mechanical seal

Type	Single internal seal
Material of rotating part	Graphite (C) (standard) Silicon carbide (SiC)
Material stationary part	Silicon carbide (SiC) (standard)
Gasket material	EPDM (standard) FPM

### Motor


Type	Three-phase asynchronous motor, IEC B34 type, 2 or 4 poles, IP55 protection, Class-F insulation
Power	0.37 to 11 kW
Voltage and frequency	220-240 V Δ / 380-420 V Y, ≤ 4 kW 380-420 V Δ / 660-690 V Y, ≥ 5.5 kW

## 8.2. TIGHTENING TORQUES

If not stated otherwise, the torques listed in the following table should be applied on the nuts and bolts of this pump.

Size	Nm	lbf·ft
M6	10	7
M8	21	16
M10	42	31
M12	74	55
M16	112	83

### 8.3. CROSS SECTION HYGINOX SE

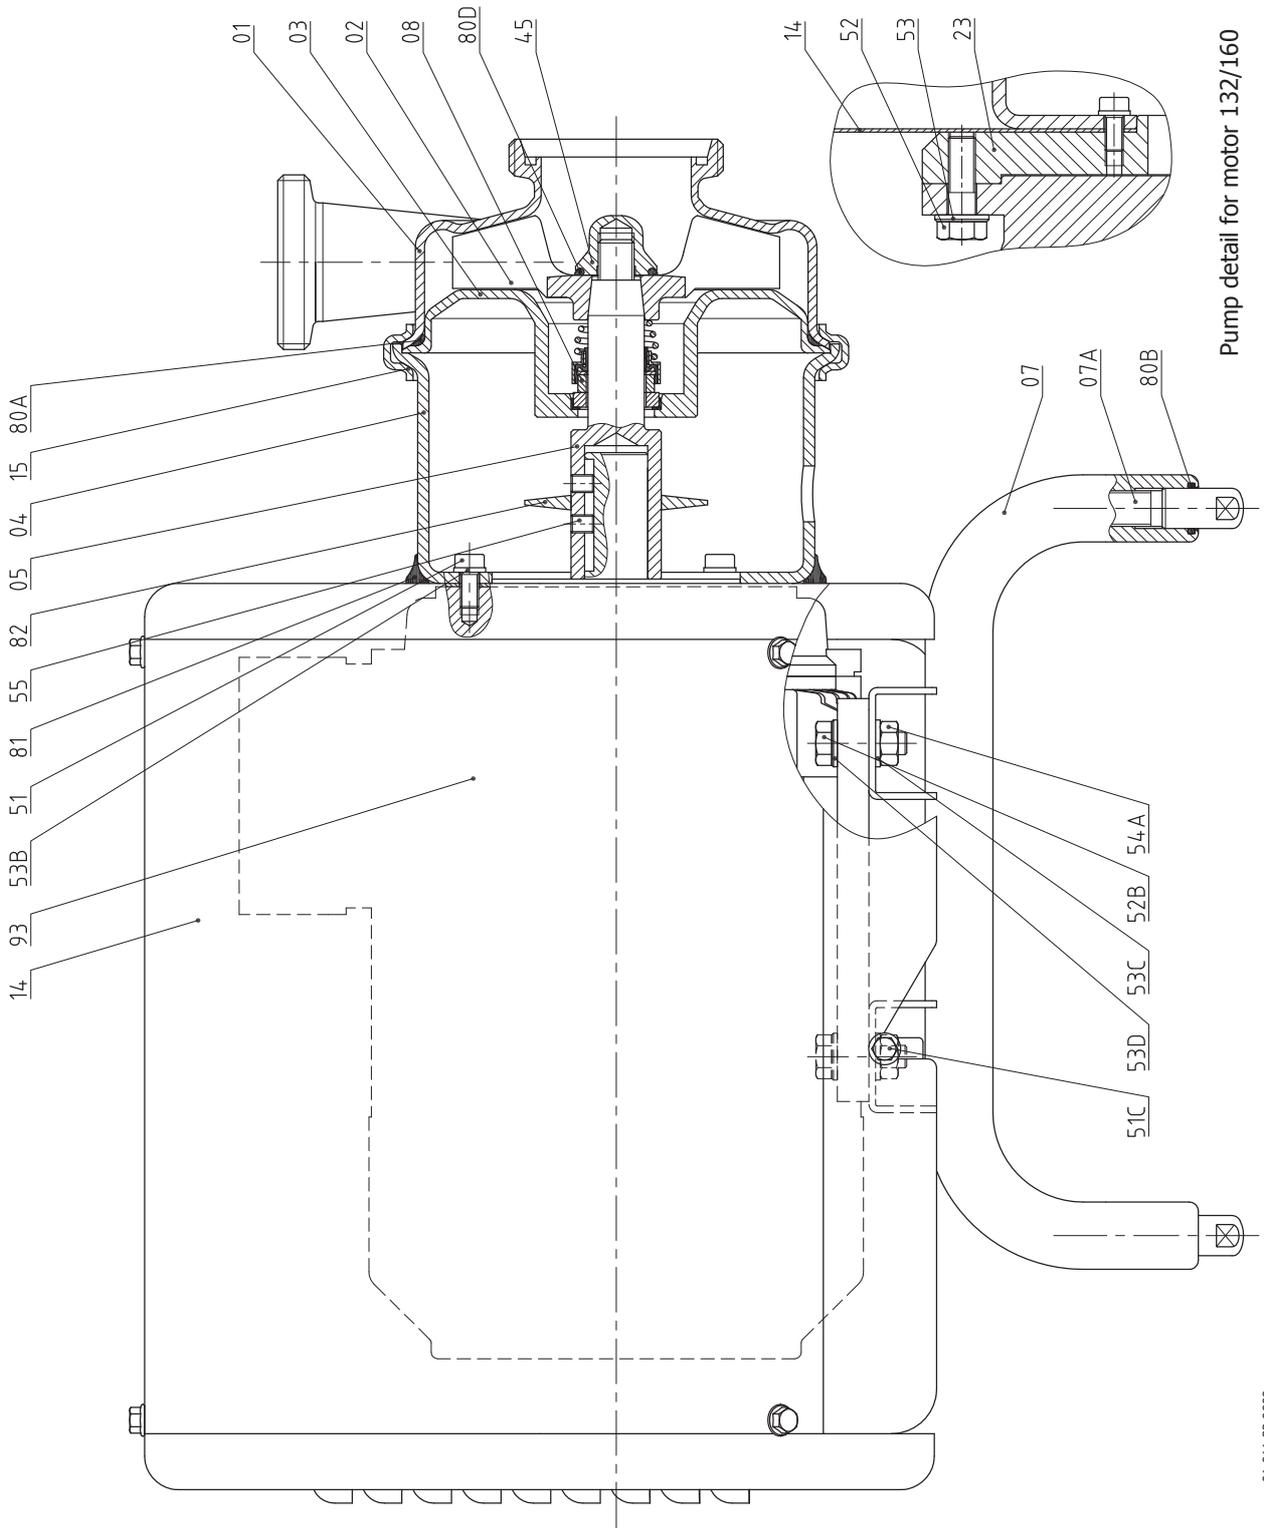

Pump detail for motor 132/160

01.011.32.0009

#### 8.4. HYGINOX SE PARTS LIST

Position	Description	Quantity	Material
01	Pump casing	1	AISI 316L
02	Impeller	1	AISI 316L
03	Pump cover	1	AISI 316L
04	Lantern	1	AISI 304
05	Shaft	1	AISI 316L
07	Motor leg	2	AISI 304
07A	Adjustable leg	4	AISI 304
08	Mechanical seal	1	-
14	Shroud	1	AISI 304
15	Casing clamp	1	AISI 304
45	Cap nut	1	AISI 316L
51	Allen screw	4	A2
51C	Screw with flange	2	A2
52A	Hexagonal screw	2	A2
52B	Hexagonal screw	4	A2
53B	Grower washer	4	A2
53C	Flat washer	8	A2
53D	Grower washer	4	A2
54A	Hexagonal nut	4	A2
55	Stud	2	A2
80A	O-ring	1	EPDM
80B	O-ring	4	EPDM
80D	O-ring	1	EPDM
81	Lantern joint	1	EPDM
82	Splash ring	1	EPDM
93	Motor	1	-

#### Parts only for pumps with motor sizes 132 and 160

23	Counterflange	1	LM4
52	Hexagonal screw	4	A2
53	Flat washer	4	A2