

12 Clintonville Road  
Northford, CT 06472-1653  
Phone: 203.484.7161

## FZM-1 Interface Module

### SPECIFICATIONS

|  |   |
|--|---|
| Normal Operating Voltage:                        | 15 to 32 VDC  |
| Maximum Current Draw:                            | 5.1 mA (LED on)   |
| Average Operating Current:                       | 270µA (LED flashing)  |
| EOL Resistance:                                  | 3.9K Ohms   |
| Maximum IDC Wiring Resistance:                   | 25 Ohms   |
| IDC Supply Voltage (between Terminals T3 and T4) |   |
| Regulated DC Voltage:                            | 24 VDC power limited  |
| Ripple Voltage:                                  | 0.1 Volts RMS maximum   |
| Current:   | 90mA per module   |
| Temperature Range:                               | 32°F to 120°F (0°C to 49°C)   |
| Humidity:  | 10% to 93% Non-condensing   |
| Dimensions:                                      | 4 1/2" H × 4 W × 1 1/4" D (Mounts to a 4" square by 2 1/8" deep box.) |
| Accessories:                                     | SMB500 Electrical Box   |

### BEFORE INSTALLING

This information is included as a quick reference installation guide. Refer to the control panel installation manual for detailed system information. If the modules will be installed in an existing operational system, inform the operator and local authority that the system will be temporarily out of service. Disconnect power to the control panel before installing the modules.

NOTICE: This manual should be left with the owner/user of this equipment.

### GENERAL DESCRIPTION

The FZM-1 Interface Module is intended for use in intelligent, two-wire systems, where the individual address of each module is selected using the built-in rotary switches. This module allows intelligent panels to interface and monitor two-wire conventional smoke detectors. It transmits the status (normal, open, or alarm) of one full zone of conventional detectors back to the control panel. All two-wire detectors being monitored must be UL compatible with this module. The FZM-1 has a panel controlled LED indicator and can be used to replace an MMX-2 module in existing systems. FZM-1 is capable of handling more than one detector in alarm condition.


### COMPATIBILITY REQUIREMENTS

To ensure proper operation, this module shall be connected to a compatible Notifier system control panel only (list available from Notifier). In addition, please refer to Notifier Device Compatibility document number 15378 for the compatible list of detectors.

### MOUNTING

The FZM-1 mounts directly to 4-inch square electrical boxes (see Figure 2). The box must have a minimum depth of 2 1/8 inches. Surface mounted electrical boxes (SMB500) are available from Notifier.

FIGURE 1. CONTROLS AND INDICATORS:

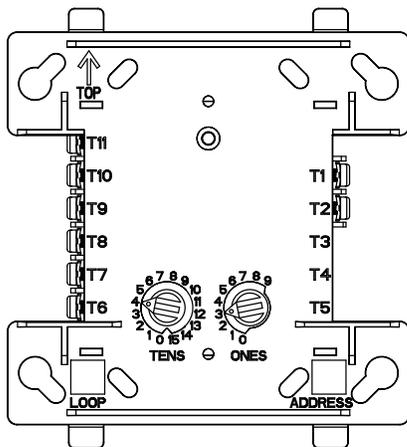


### WIRING

NOTE: All wiring must conform to applicable local codes, ordinances, and regulations. This module is intended for powerlimited wiring only.


1. Install module wiring in accordance with the job drawings and appropriate wiring diagrams.
2. Set the address on the module per job drawings.
3. Secure module to electrical box (supplied by installer), as shown in Figure 2.

FIGURE 2. MODULE MOUNTING:

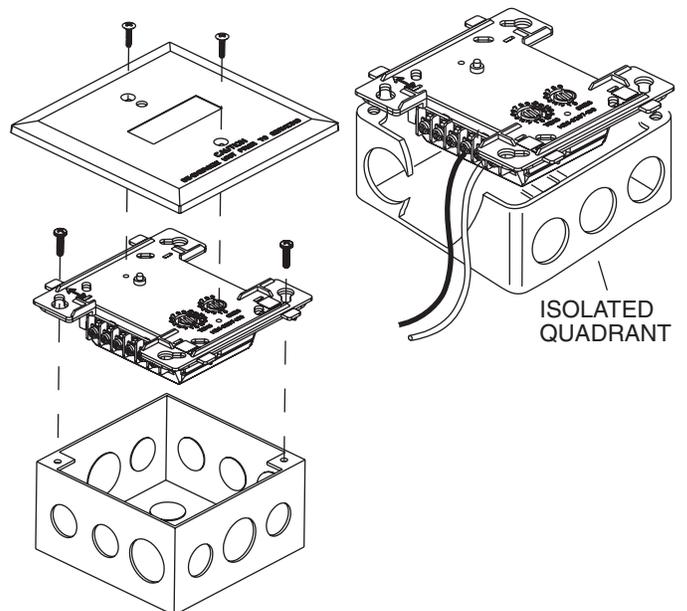


C1066-00

**FIGURE 3. INTERFACE TWO-WIRE CONVENTIONAL DETECTORS, NFPA STYLE B:**

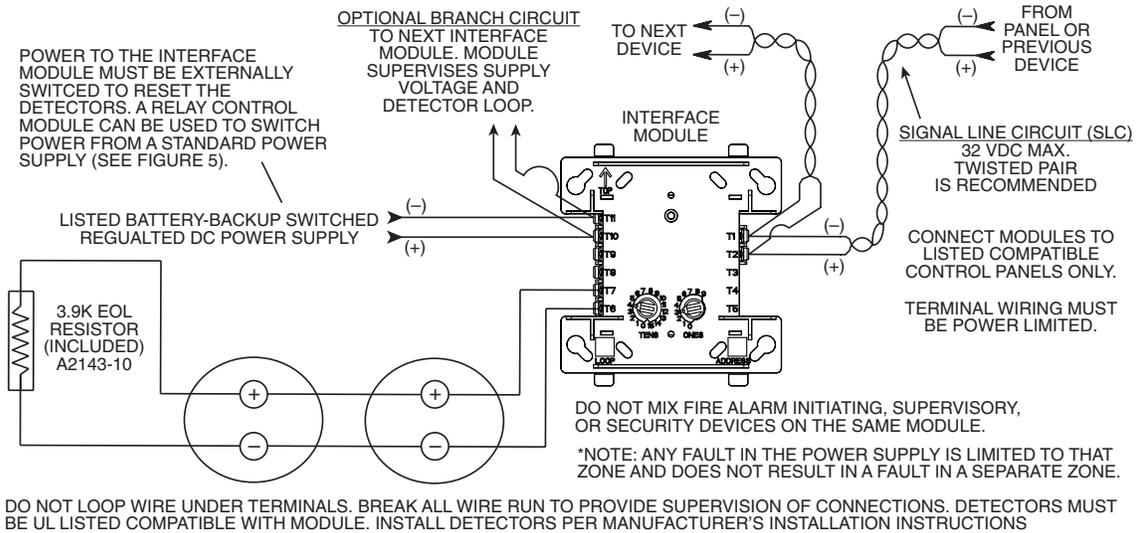


C1061-00

**FIGURE 4. INTERFACE TWO-WIRE CONVENTIONAL DETECTORS, NFPA STYLE D:**

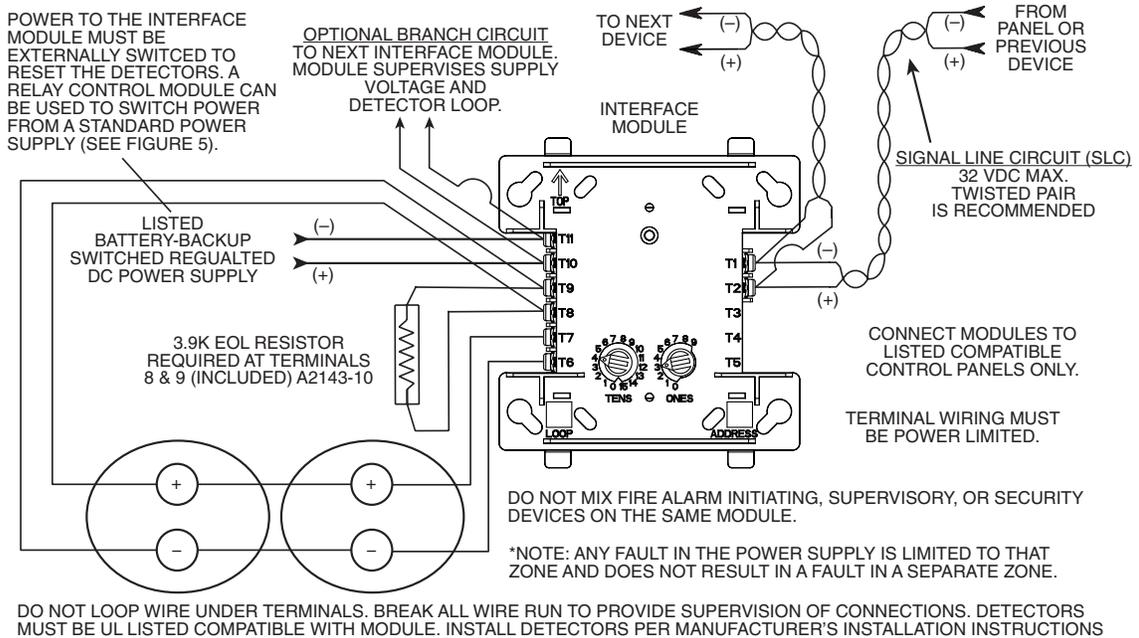

C1062-00

**FIGURE 5. RELAY CONTROL MODULE USED TO DISCONNECT A POWER SUPPLY:**

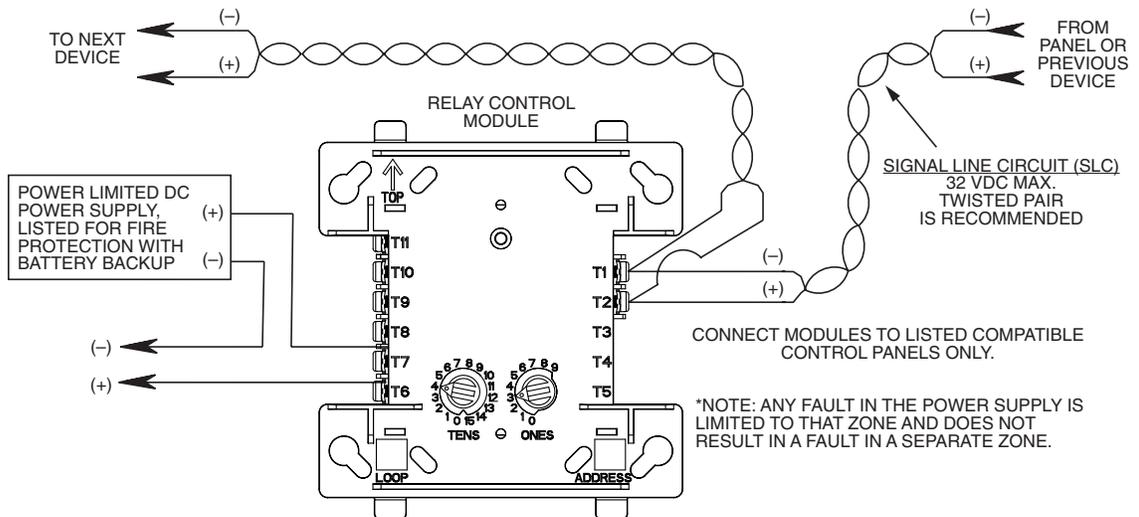

C0945-00